 


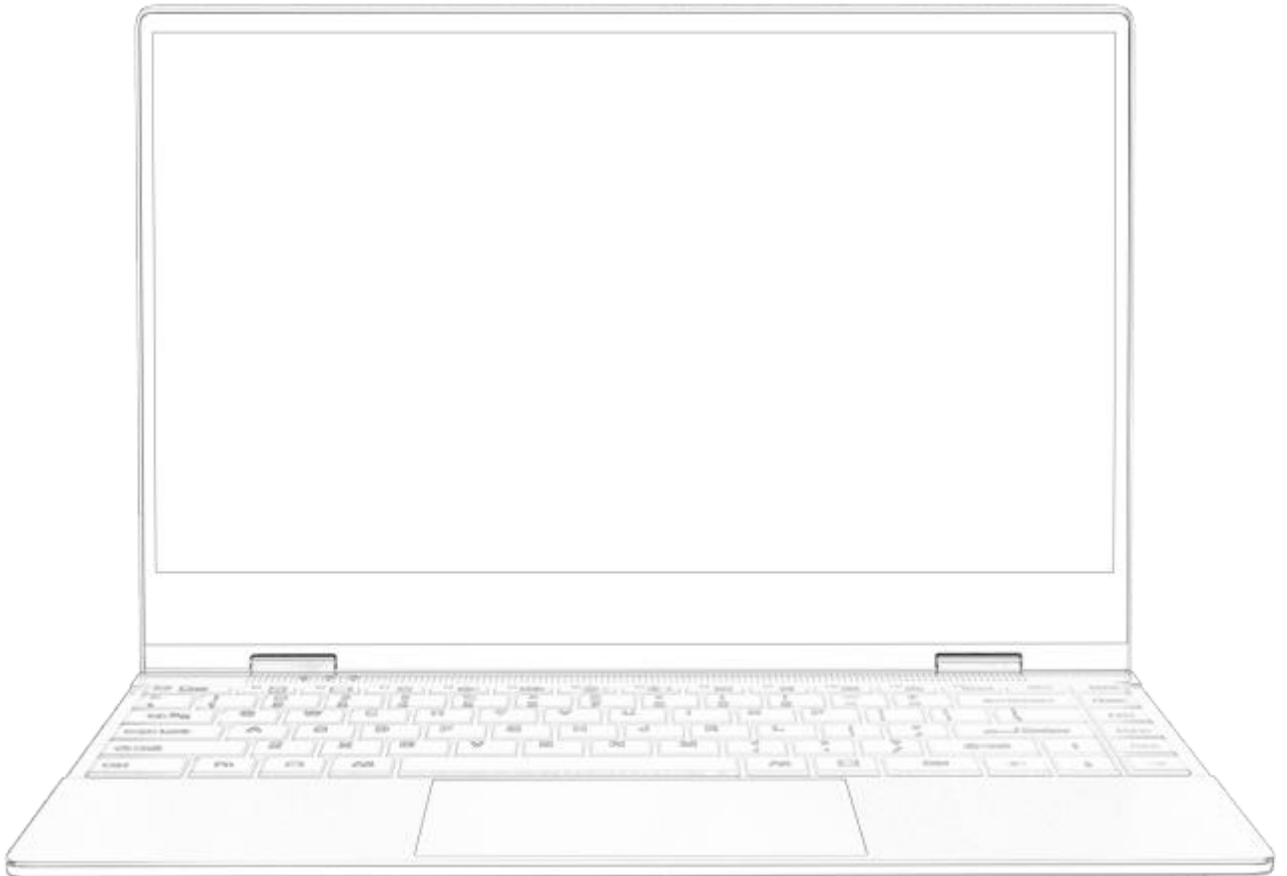

Changing touch
Touch our good life easily




X14 Graphics Portable Monitor **USER MANUAL**


Contents

➤ Monitor Introduction	3
➤ OSD panel	4
➤ Hot Keys	5
➤ Package List	5
➤ FAQ	5
➤ Monitor Specifications	7
➤ Supported Devices and Models	8

 Monitor Introduction

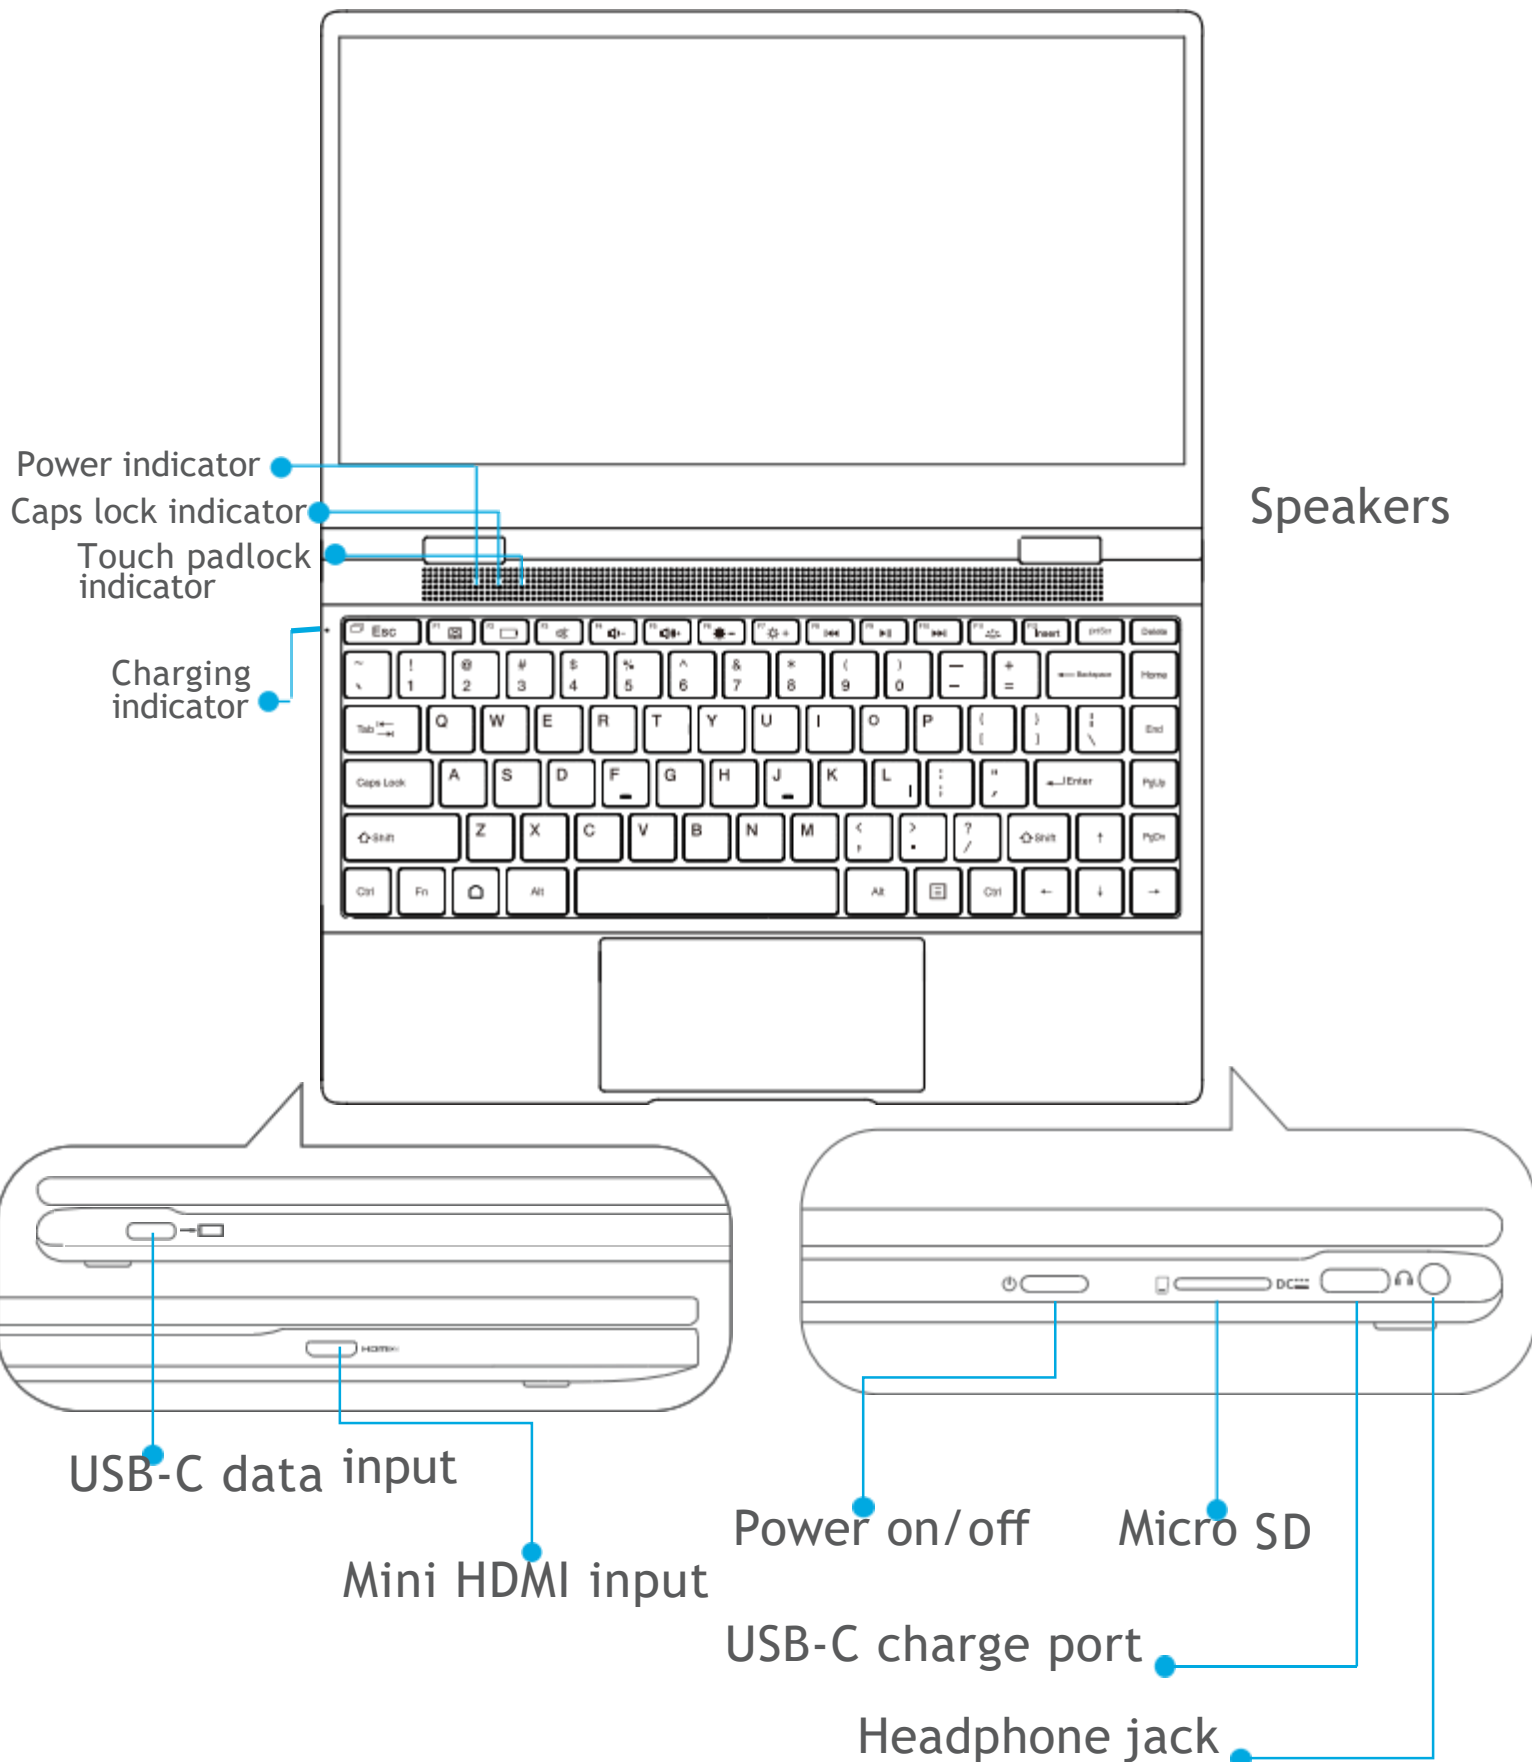

OSD panel

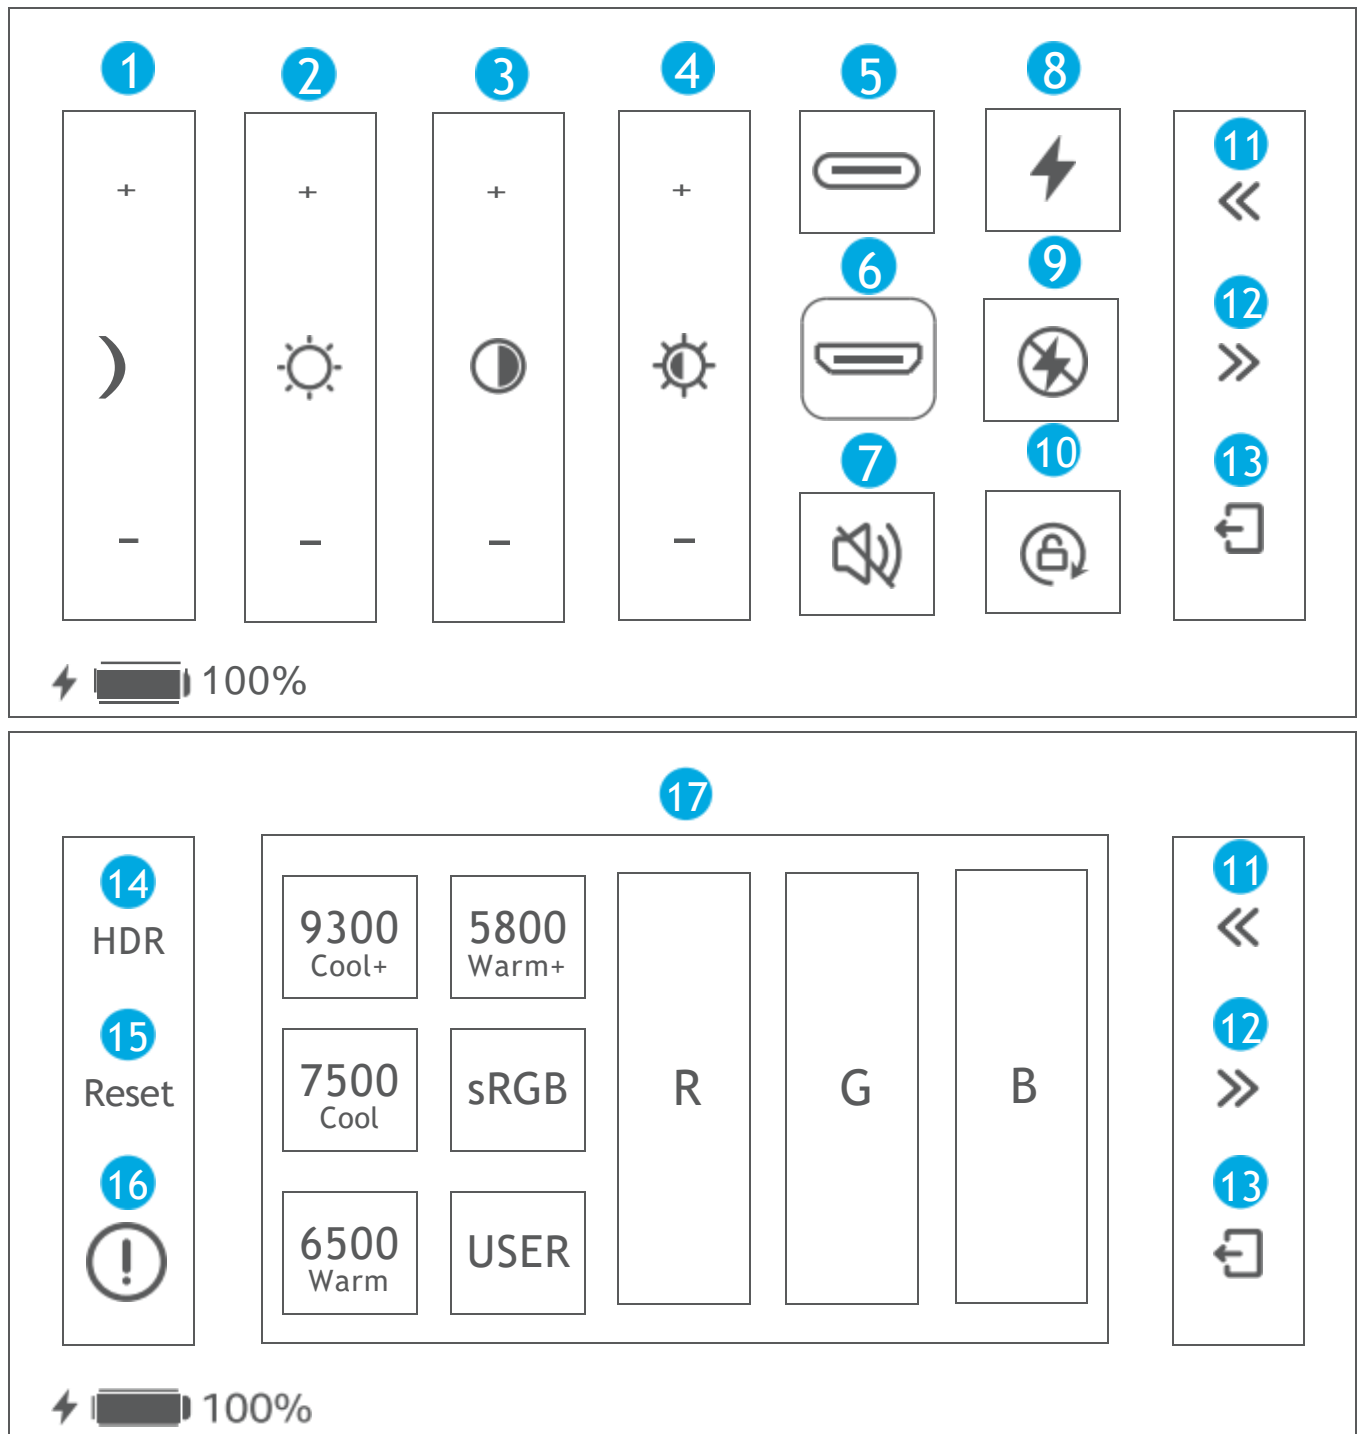 

- 1 Volume
- 2 Brightness
- 3 Sharpness
- 4 On-screen brightness
- 5 Type C input
- 6 HDMI input
- 7 Mute
- 8 Reverse charging on
- 9 Reverse charging of
- 10 Auto rotate
- 11 Page up
- 12 Page down
- 13 Exit
- 14 HDR on/off
- 15 OSD Reset
- 16 Information
- 17 Color temperature adjustment

Hot keys



Esc

Back



F6

Backlight-



F1

Touchpad on/off



F7

Backlight+



F2

Battery



 
F8

Previous



F3

Mute



F9

Play/Pause



F4

Volume-



F10

Next



F5

Volume+



F11

Keyboard Backlight

Package List



14.1" Portable Monitor



Type-C to Type-C
(Full-featured)



Type-C to Type-C
(For power supply only)



 
USB-A to USB-C



HDMI to Mini HDMI




User Manual

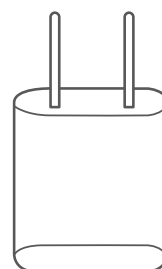

Adapter

FAQ

Questions	Answers
How to access OSD?	Access OSD by swipe-down with two fingers at the bottom right corner of the screen.
No image	<ol style="list-style-type: none"> 1. Check if power is on, connect with charger and restart in 10 minutes. 2. Check if your device is compatible. 3. Restart your device and portable monitor.
Touchscreen, touchpad or keyboard not working	When connects HDMI with your desktop, it functions only as a second monitor. Please connects with USB-C for full functions.
No volume	Please check if it is mute, as well as your device's volume.
Touchpad not working	Check if <u>toachpadlock</u> is on ( F1) key.
Auto rotate not working	Check OSD if auto rotate is on.
Unable to reverse charge your device	<ol style="list-style-type: none"> 1. Check if your device supports 5V input. 2. Check if reverse charging on OSD is on.

Monitor Specifications

Model	X14 Graphics
Screen size	14.1inch
Resolution	1920*1080P
Color Gamut	72%NTSC
Brightness	300CD/M ²
Speaker	8Ω/1W*4
Touch	Support (10 finger)
I/O	1*Charging line Type C 1* DP Type C 1*Mini HDMI 1*SD card 1*headphone jack
Battery capacity	3.8V/10800mAh
Dimension	12.68" * 8.58" * 0.51" (322*218*13mm)

Supported Devices and Models

Laptop model			
Apple	12" Mack book	Huawei	Magic book
	Mac book pro		Mate book E
	I-pad pro 2018	HP	Spectre 13
MIUI	Air	Dell	XPS 13 9360
	Pro		XPS 15
Lenovo	X280		

Smartphone model			
Huawei	Mate 10/Pro	Mate 20/Pro/RS/X	P20/Pro/Mate30/Pro
	P30/Pro	P40/Pro/Pro+	Nova7 Pro 5G
	Honor 10	Honor 20	Honor 30
Samsung	S8/S8+	S9/S9+	S10/S10+
	S10E	S20/S20+/S20U	Note 8
	Note9	Note10	Note20
Xiaomi	Black shark 2	LG	V50
	Black shark 3	Hammer	Nut PRO3

* Dopesplay X14 theoretically compatible with many different devices with USB-C connectivity, including laptops, smartphones, PlayStation, Nintendo Switch, Xbox, cameras, Mac Mini, Raspberry Pi, mini PCs and more.



Changing touch

Touch our good life easily

<https://changingtouch.com>

If you need any help, please don't
hesitate to contact us via the email address
help@changingtouch.com
and we will help you solve the problems as soon as possible.