



Changing touch

Touch our good life easily



F16S Smart Frame USER MANUAL

 
Contents

➤ Frame Introduction	3
➤ Function Introduction	4
■ Main Interface	4
■ Quick Ball	5
■ Brightness Setting	6
➤ Package List	7
➤ FAQ	8
➤ Frame Specifications	9

Frame Introduction



15.6" Digital Photo Frame

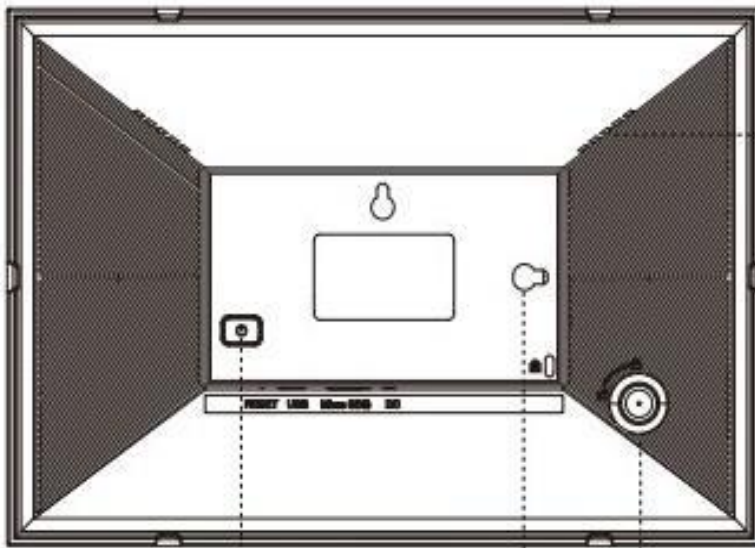


Speaker

Power Button

Wall Hole

 Stand Hole

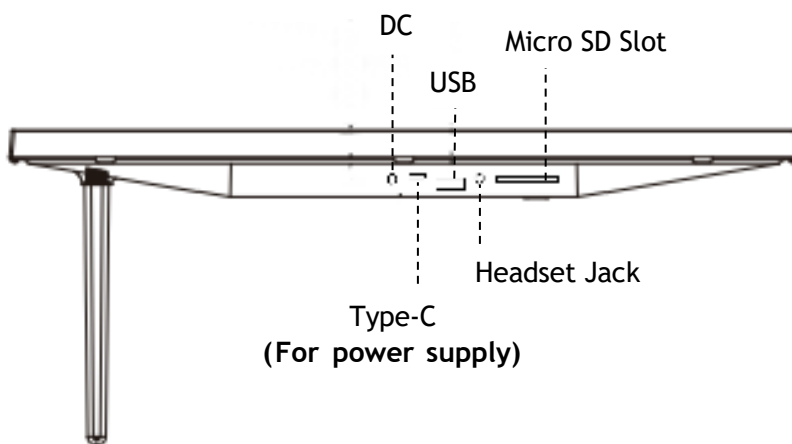

DC

Micro SD Slot

USB

Headset Jack

Type-C
(For power supply)

Function Introduction

Main Interface

In the main interface you will find the most used features. To access the menu, simply tap once on the screen.

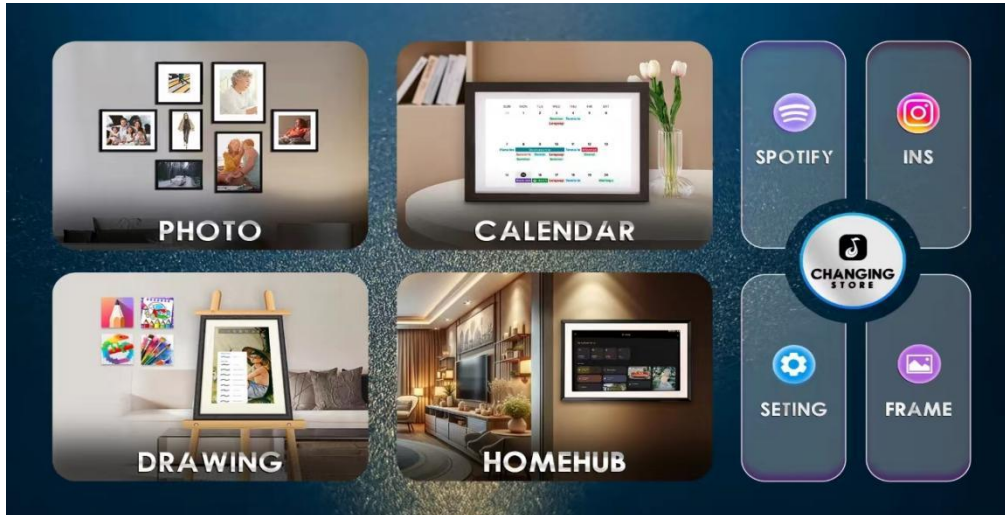 


Photo: Open the Photo.

Calendar: Open the Calendar.

Drawing: The drawing menu contains common drawing tools.

Homehub: The Homehub menu contains used applications.

Spotify: Open the Spotify.

INS: Open the INS.

Seting: Open the Seting.

Frame: Here you can choose to display the photos in the way you like.

Changing store: This leads to our shop where you can browse more product information.

Function Introduction

Quick Ball

The quick ball is resident on the main interface and offers common shortcuts.



Return key: Return to previous step



Home button: Return to main interface



Volume +: Turn up the volume



Volume -: Turn down the volume

 


Google Assistant: This shortcuts provides access to Google Assistant.


Function Introduction

Brightness setting

The brightness is controlled by 'time control' options in the 'display' and the desired brightness can be adjusted in 'time control' options.

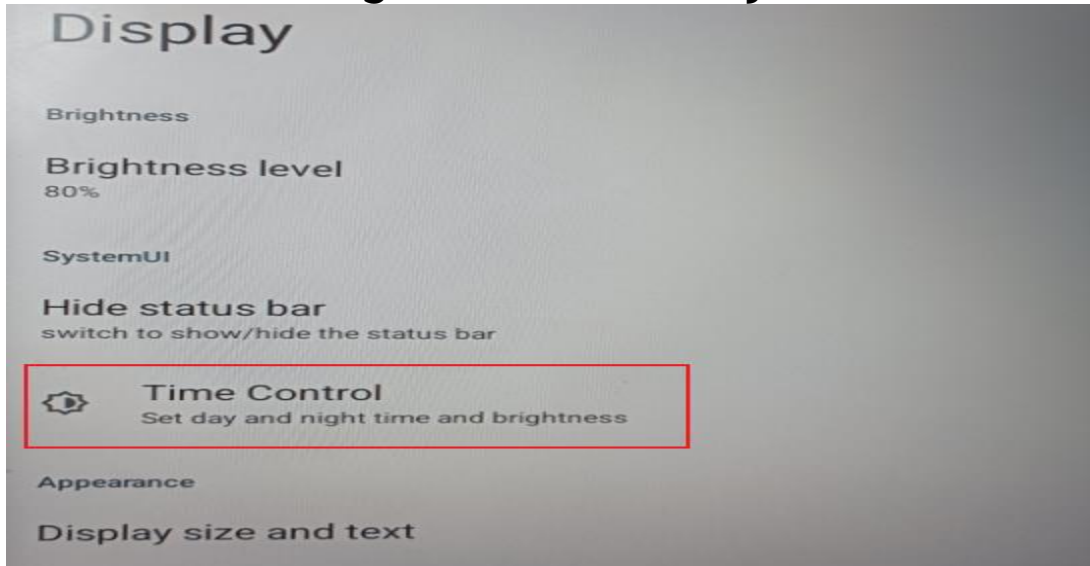


 Click to enter the time control selection, you can set the corresponding interval time of day and night respectively, and adjust the corresponding brightness.

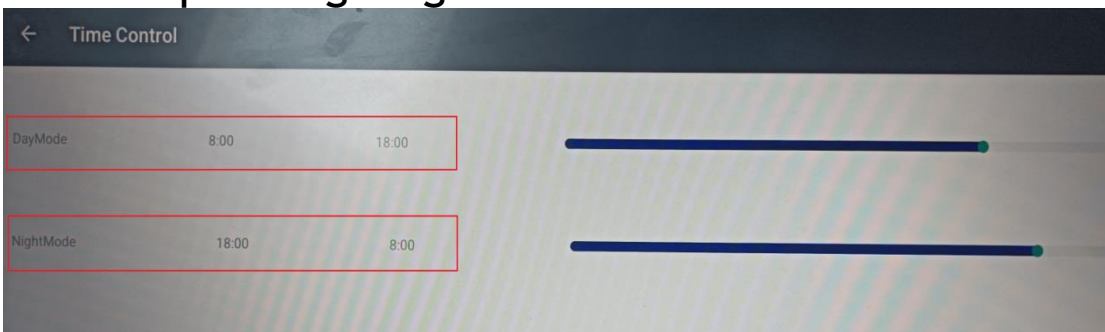

When the fr time is in the set interval time, the brightness will be automatically adjusted to the preset brightness.

 Package List

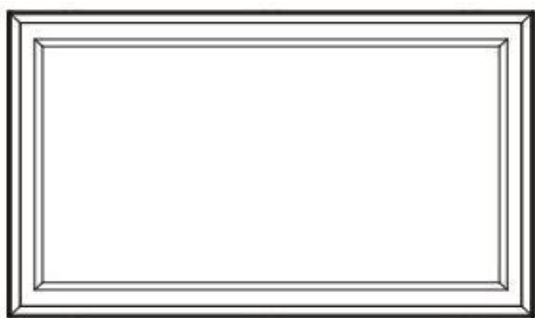


Smart Frame




Stand



 USB to Type-C
(For power supply)



Stylus pencil

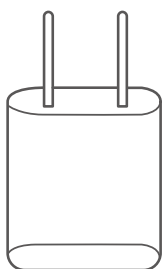 

Adapter



User Manual

Questions	Answers
Startup & Shutdown	Hold down the power button for several seconds.
Frame can't boot	<ol style="list-style-type: none"> 1. Check if the battery is fully charged. 2. Check the power adapter before restarting the frame again. 3. It is recommended to connect the adapter when using, and the battery is only used for short time entertainment. 4. If it is still unable to boot after charging, please contact us.
Extinguishing screen	The frame screen is always on by default. Please press the power button if you want to turn off the screen.
Undercharge	<ol style="list-style-type: none"> 1. Reduce brightness appropriately. 2. Reduce the volume appropriately.
Quick ball lost	Please try rotating the frame to show.
Active Stylus Support	The frame supports MPP and USI protocol active stylus, but due to the different manufacturers of active stylus, the drawing effect will be different, and the actual effect shall prevail.

Frame Specifications

Model	F16S
Appearance	Oak Wood or Walnut Wood or Black Plastic
Screen size	15.6 inch
Resolution	1920*1080P
Color Gamut	72%NTSC
Brightness	255CD/M ²
Speaker	4Ω/2W*2
Touch	Support (10 finger)
Active Stylus	Support (MPP/USI protocol)
Battery capacity	3.8V/4000mAh



Changing touch

Touch our good life easily

www.changingtouch.com

If you need any help, please don't
hesitate to contact us via the email address
help@changingtouch.com
and we will help you solve the problems as soon as possible.